


C.A 6131 - C.A 6133

Electrical installation testers

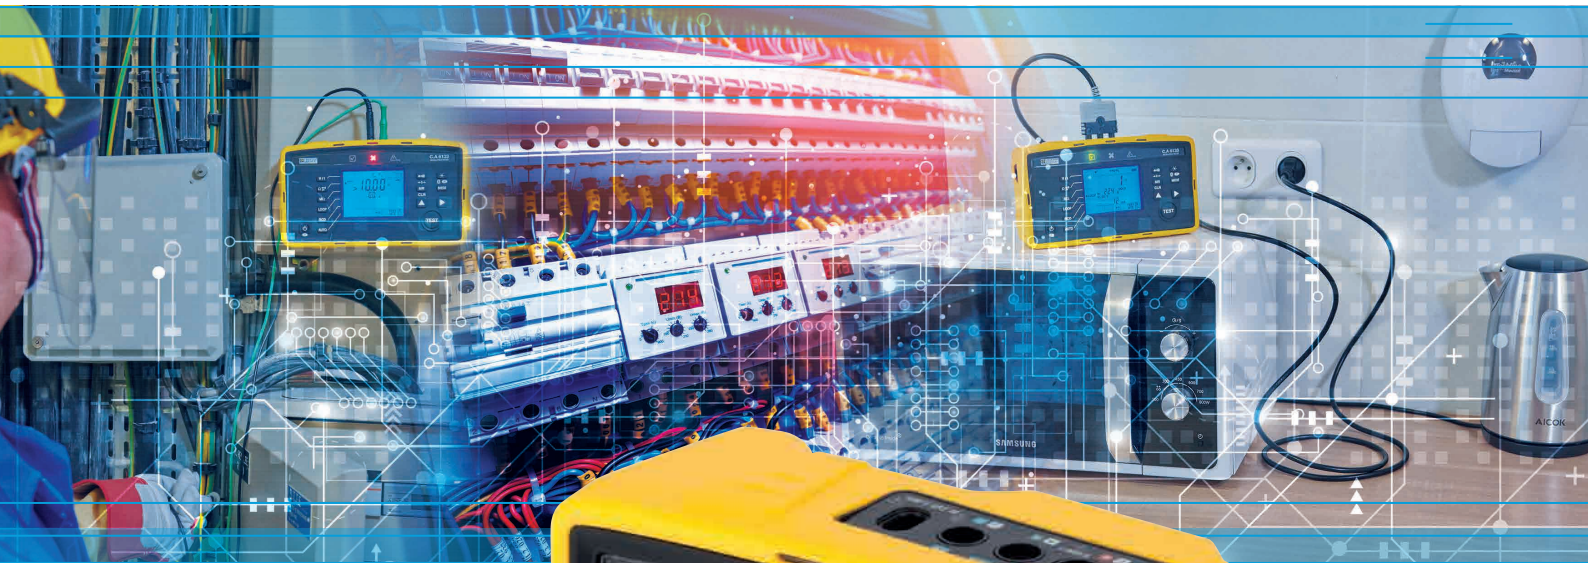

Test the electrical safety of your installations

- Earth measurement by stake and loop methods
- Continuity measurement at 0.2A
- Insulation testing
- RCD testing: current and trip time
- Automatic test sequences
- Storage of test results
- ANDROID application for report generation
- Power supply by mains-rechargeable batteries, USB socket or vehicle cigarette lighter



ELECTRICAL INSTALLATION TESTERS

ERGONOMICS AND FUNCTIONS

Designed for checking safety on electrical installations, the C.A 6131 and C.A 6133 can be used to test a new installation before powering it up, check an existing installation, whether in operation or not, and to troubleshoot a dysfunction.

For inspection organizations, these portable instruments are simple, effective and, above all, compliant with the applicable standards.



Magnetized casing for magnetic mounting.



Neck strap for hands-free use.




Built-in stand for benchtop use..



Charging via universal USB connections!

Functions

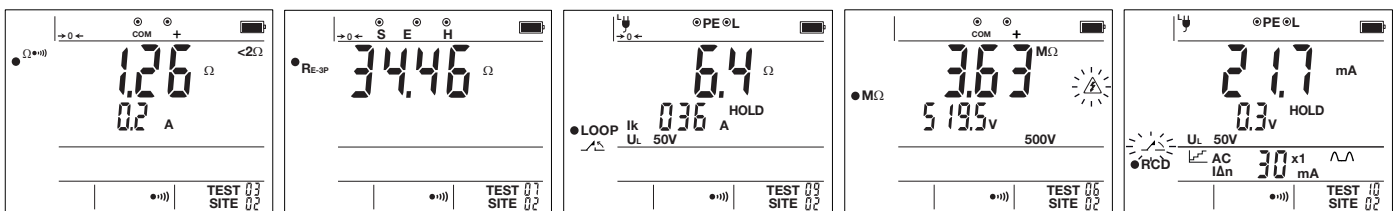

Continuity

Compliant with the IEC 61557-4 standard, if the buzzer is active, users are informed by a beep if the measurement is below the threshold, so they do not have to look at the screen.

Earth

This function allows you to measure an earthy resistance using the stake method when the electrical installation to be tested is not powered up (new installation, for example). It is only available on the C.A 6133.

Loop

Loop measurement is performed in Trip or No Trip mode. On a TN or TT installation, loop impedance measurement can be used to size the protective systems for the installation (fuses or RCDs), particularly in terms of breaking capacity. On a TT installation, this measurement serves to determine the value of the earth resistance without setting up any stakes and without having to power down the installation.

Insulation


The user selects the test voltage and chooses the set of alarm thresholds. A visual indication instantaneously shows whether the test is OK or not: if the measurement is higher than the threshold, the V LED lights up. If the measurement is lower than the threshold, the X LED lights up.

RCD

The comprehensive RCD test can be used with type A and AC RCDs. 3 types of test are available:

- No Trip test,
- Trip test in pulse mode,
- Trip test in ramp mode.

CHECK THE COMPLIANCE OF ELECTRICAL INSTALLATIONS WITH A SINGLE INSTRUMENT

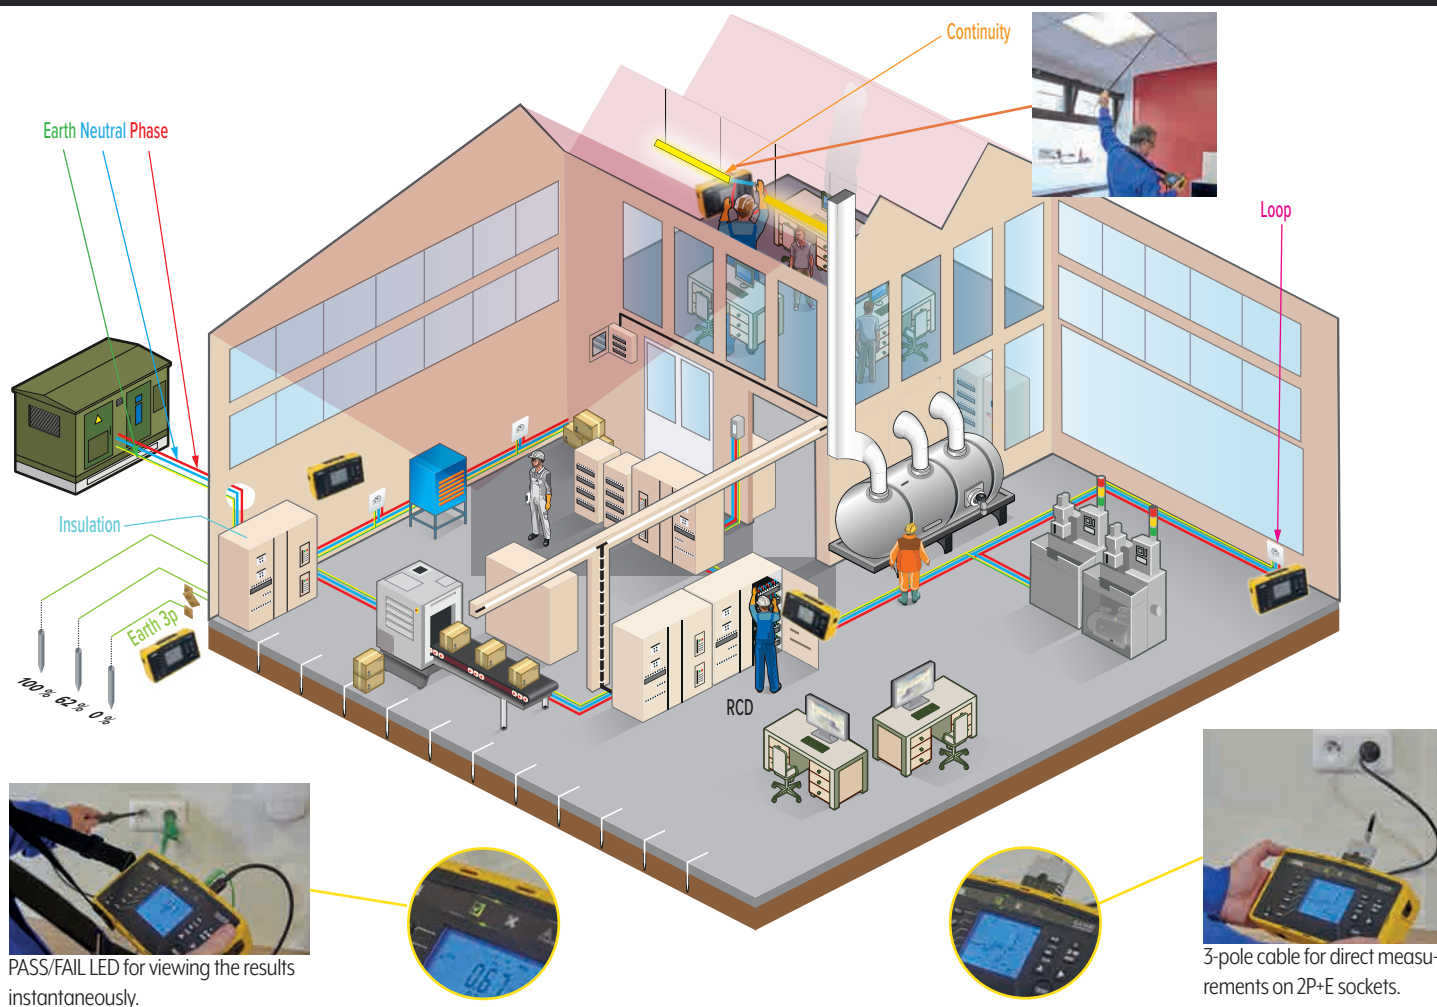

COMPLEMENTARY FUNCTIONS AVAILABLE ON THE C.A 6133


Automatic test sequence

Save time! The AUTO-RCD automatic test sequence performs the following operations:

- the No-Trip test, the Trip test at $1 \times I_{\Delta n}$ and the Trip test at $5 \times I_{\Delta n}$,
- if necessary, the Trip test in ramp mode. A single press on the backup buttons saves all the tests performed.

Another automatic test sequence is also available which performs the following tests, successively:

LOOP – RCD – INSULATION

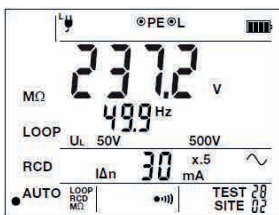


Current measurement

The MN73A clamp is recognized automatically when it is connected, as is the measurement calibre.




Data storage

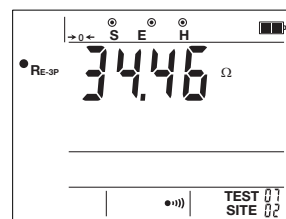

The data storage function can be used to store your measurement results: up to 99 tests per site on up to 30 sites!

Bluetooth communication for Android IT-Report application

The ANDROID IT-Report application can be used to transfer the test results stored in the C.A 6133 onto a tablet or smartphone via Bluetooth. Test reports are then generated and sent automatically by email or simply stored for processing later on.

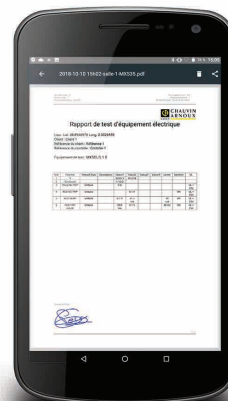

	Technical Specifications				
	C.A 6131		C.A 6133		
Continuity					
Range / Resolution / Accuracy	0.00 to 9.99 Ω – Compensation of cables up to 5 Ω; I ≥ 200 mA / 0.01 Ω / ± (2 % R* + 2 cts)				
Resistance					
Range / Resolution / Accuracy	1 to 9,999 Ω – 10.00 to 99.99 kΩ / 1 Ω – 10 Ω / ± (1 % R + 5 cts)				
Insulation					
Test voltage	250 V / 500 V		250 V / 500 V / 1 000 V		
Range / Resolution / Accuracy	0.01 to 999.9 MΩ / 10 kΩ or 100 kΩ / ± (3 % R + 3 cts)				
Earth resistance - 3P method					
Range	-	0.50 to 99.99 Ω	100.0 to 999.9 Ω	1,000 to 2,000 Ω	
Resolution	-	0.01 Ω	0.1 Ω	1 Ω	
Accuracy	-	±(2 % R + 10 cts)	±(2 % R + 5 cts)	±(2 % R + 5 cts)	
Measurement frequency	-	128 Hz			
Earth loop (Zs) measurement					
No Trip (12 mA)					
Range / Resolution / Accuracy	1 to 19 Ω – 20 to 39 Ω – 40 to 2,000 Ω / 1 Ω / ± (2 cts) – ±(15 % R + 3 < cts) – ± (5 % R + 2 cts)				
Calculation of Ik	1 to 999 A				
With Trip (300 mA)					
Range / Resolution / Accuracy	0.1 to 0.9 Ω – 1.0 to 399.9 Ω / 0.1 Ω / ±(2 cts) – ±(5 % R + 2 cts)				
Calculation of Ik	1 to 9,999 A				
Fault loop (Zi) measurement					
Type of connection	Banana cables				
Range / Resolution / Accuracy	300 mA measurement current: 0.1 to 0.9 Ω – 1.0 to 399.9 Ω / 0.1 Ω / ± (2 cts) – ± (5% R + 2 cts)				
Calculation of Ik	1 to 9,999 A				
RCD test					
Installation voltage	90 to 450 V; 45 to 65 Hz				
Types and calibres	AC and A; 30 mA - 100 mA - 300 mA - 500 mA - 650 mA				
Trip time	0.5 x I ΔN ; 1 x I ΔN ; 5 x I ΔN / 5.0 to 300 ms				
Trip current	30 mA: 0 .. +(7%R +3.3% I ΔN + 2 mA)				
Fault voltage: Range / Resolution / Accuracy	1.0 to 25.0 V – 25.0 to 70.0 V / 0.1 V / ± (15% R + 3 cts) – ± (5% R + 2 cts)				
Automatic test sequences	No		RCD, Loop-RCD-Insulation		
Voltage & Frequency					
Voltage: Range / Resolution / Accuracy	2.0 to 550.0 VAC – 0.0 to 800.0 VDC / 0.1 V / ± (1%R+2cts)				
Frequency: Range / Resolution / Accuracy	-		30.0 to 999.9 Hz / 0.1 Hz / ±(0.1 % R + 1 ct) - Voltage > 2V		
Phase rotation	45 to 550 V – 45 to 65 Hz				
Current					
	Via clamp with voltage output using the voltage sensor function (AUX)		Via MN73A clamp with 2A calibre: 10.0 mA to 2,400 mA, 200 A calibre: 1.00 to 200 A		
AUX sensor function (C.A 6131)					
AC+DC range: Range / Resolution / Accuracy	2.0 to 999.9 mV / 1.000 to 1.2000 V / 0.1 mV – 1 mV / ±(1 % R + 2 cts)		-		
DC range / Resolution / Accuracy	±(0.0 to 999.9 mV) – ±(1.000 to 2.000 V) / 0.1 mV – 1 mV / ±(1 % R + 2 cts)		-		
General Specifications					
Display	Custom 231-segment LCD with blue backlighting				
Data storage	-		30 sites x 99 tests		
Communication	-		Bluetooth Class I; range > 10m		
Software	-		Android IT-Report application		
Power supply	6 x LR 6 or AA batteries		6 NiMH mains-rechargeable batteries, charging < 6 hrs , USB or vehicle cigarette lighter		
Battery life	> 1,900 continuity measurements at 1 Ω		> 1,700 continuity measurements at 1 Ω		
Dimensions / weight	223 x 126 x 70 mm / 700 g approx.				
Environment	Use: 0 to 40 °C / Storage: - 10 to 70 °C (RH 80%)				
Protection	IP 54 (IEC 60 529) ; IK 04 (IEC 50102)				
Standards / Electrical safety	EMV: IEC 61326-1 ; IEC 61010-1 ; IEC 61010-2-030 ; IEC 61010-2-034, 600V CAT III, 300V CAT II on charger input				
Compliance with IEC 61557	Parts 1, 2, 3, 4, 6, 7 and 10		Parts 1, 2, 3, 4, 5, 6, 7 and 10		

State at delivery and references

C.A 6131

P01146011

Low-voltage installation tester delivered in a cardboard box containing:

- 1 carrying bag
- 1 neck strap
- 1 EURO mains 3-pole cable
- 3 x 1.5m/4 mm safety cables (red/black/green),
- 3 crocodile clips (red/black/green),
- 1 black test probe, 6 x LR6 1.5V batteries,
- 1 User's manual on CD-ROM (5 languages),
- 1 quick startup guide on paper,
- 1 safety datasheet,
- 1 test report with measurement report

C.A 6133

P01146013

Low-voltage installation tester delivered in a cardboard box containing:

- 1 carrying bag
- 1 neck strap
- 1 EURO mains 3-pole cable
- 3 x 1.5m/4 mm safety cables (red/black/green),
- 3 crocodile clips (red/black/green),
- 1 black test probe,
- 6 x NiMH batteries,
- 1 x 2A USB power supply,
- 1 razor-type USB power cable,
- 1 User's manual on CD-ROM (5 languages),
- 1 quick startup guide on paper,
- 1 safety datasheet,
- 1 test report with measurement report
- 1 battery information sheet

Accessories

- Remote-control probe: **P01102157**
- MN 73A 2A/200A bi-calibre current clamp with 4-point connectors (C.A 6133): **P01120439**
- MN 73 2A/200A bi-calibre current clamp with banana connections (C.A 6131): **P01120421**
- Continuity rod **P01102084A**



FRANCE
Chauvin Arnoux
 190, rue Championnet
 75876 PARIS Cedex 18
 Tel: +33 1 44 85 44 38
 Fax: +33 1 46 27 95 59
 export@chauvin-arnoux.fr
 www.chauvin-arnoux.com

UNITED KINGDOM
Chauvin Arnoux LTD
 Unit 1 Nelson Ct, Flagship Sq, Shaw Cross Business Pk
 Dewsbury, West Yorkshire - WF12 7TH
 Tel: +44 1924 460 494
 Fax: +44 1924 455 328
 info@chauvin-arnoux.co.uk
 www.chauvin-arnoux.com

MIDDLE EAST
CHAUVIN ARNOUX MIDDLE EAST
 P.O. BOX 60-154
 I241 2020 JAL EL DIB - LEBANON
 Tel: +961 1 890 425
 Fax: +961 1 890 424
 camie@chauvin-arnoux.com
 www.chauvin-arnoux.com

CHAUVIN
ARNOUX
 GROUP